

Step 5. Review the .bdf File

Review the CORD2R entries at the end of the file. Note that field three is blank, which defaults to the basic coordinate system.

```
$ Direct Text Input for File Management Section
$ Linear Static Analysis, Database
SOL 101
$ Direct Text Input for Executive Control
CEND
TITLE = MSC.NASTRAN JOB CREATED ON 10-MAY-05 AT 16:49:33
ECHO = NONE
$ Direct Text Input for Global Case Control Data
SUBCASE 1
$ Subcase name : Default
  SUBTITLE=Default
  DISPLACEMENT(SORT1,REAL)=ALL
  SPCFORCES(SORT1,REAL)=ALL
  STRESS(SORT1,REAL,VONMISES,BILIN)=ALL
BEGIN BULK
PARAM      POST      0
PARAM      PRTMAXIM YES
```

•
•
•

```
GRID      398484      390000      0.      0.      -11.      390000
GRID      398485      390000     -8.307092.51969     -29.488      390000
GRID      399211      390000     20.63      14.567     -1.85039      390000
GRID      399221      390000     20.63     -14.567     -1.85039      390000
GRID      399231      390003     -36.741      2.55906      .37835      390000
$ Loads for Load Case : Default
$ Referenced Coordinate Frames
CORD2R      390000      218.885      0.      -8.076      218.885      0.      210.958
           437.919      0.      -8.076
CORD2R      390003      242.896      0.      .34683      485.792      0.      .34683
           242.896      0.      243.243
ENDDATA 229a12ff
```