


## 4. How to enter Qdload(= Qualcomm Download) mode (1)

- BoardDiag diagnosis SW operates only in **Qdload mode**. Upon initial USB cable connection, do the following to send it to Qdload mode if no port or USB serial port is held.
- Upon initial USB cable connection, don't do the following if it's already in Qdload mode.
- Use either way below(#1 recommended) to connect the USB cable while the pin is grounded.
- Check out the Device Manager for ports(COM or LPT). If **Qualcomm HS-USB Qdloader 9008 port is activated**, Qdload mode is successfully ready to work!!
- **As for the USB cable, the SW download cable v2.1 (910K) for service is recommended!!**

### 1. How to ground Boot Config switch (recommended)

## Boot Config


boot\_config 0,1,6 connect

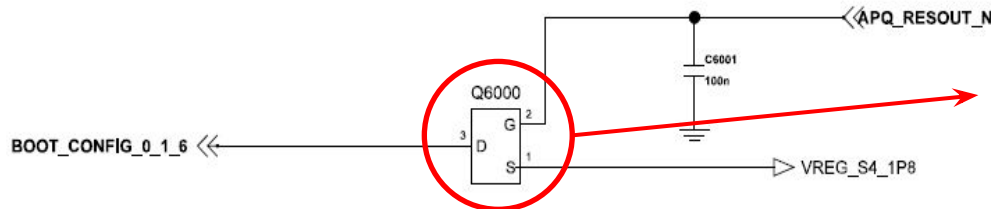

- It may depend on models. Basically, the pin of the switch connected to Boot\_config\_0 or Boot\_config\_6 is grounded.
- The circuit diagram on the left shows Q6000 switch's #3 pin need be grounded.

### 2. How to ground EMMC SDC1\_CLK resistance

## eMMC 32GB 19nm

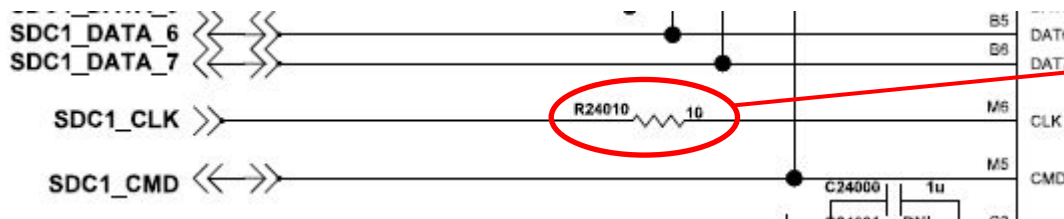

- It may depend on models. Basically, eMMC's SDC1\_CLK resistance is grounded.
- The circuit diagram on the left shows R24010 need be grounded.